

ML616 & ML628 In Basin/Vanity Soap Dispenser

Material Specifications

- #304 Stainless Steel Piston & Spout
- Brass Cover
- Polyethylene Container

Mounting

- Concealed Basin or Vanity Mount secured via ABS Threaded Nuts
- Unit is designed to be fitted into basin/vanity with a pre-drilled 25mmØ hole
- 0-100mm Adjustable Shank
- Optional 50mm Riser Mount Collar Available (ML628_COLLAR)

Capacity / Spout Length

- **ML616_4:** 475mL / 100mm
- **ML616_6:** 475mL / 150mm
- **ML628_4:** 950mL / 100mm
- **ML628_6:** 950mL / 150mm

Installation Guidelines

- *May be subject to Australian Building Code Regulations for height and location fixing and may be subject to placement as per architectural drawings. In all cases, this is the responsibility of the installer.*

1. Undo and remove the mounting lock nut from the spout.







2. Move the rubber seal and washer to the top of the shank, and insert the shank into the hole in the basin/vanity. Ensure that the seal and washer are flush with the top of the vanity/basin. This will prevent any leaks.
3. Replace the mounting nut onto the threaded shank and tighten to the underneath of the basin/vanity, ensure that the seal is tight.
4. Screw the bottle onto the threaded shank from underneath the basin/vanity and tighten until it is secure.



*ML616_4 & ML616_6



*ML628_4 & ML628_6

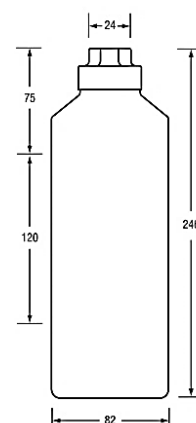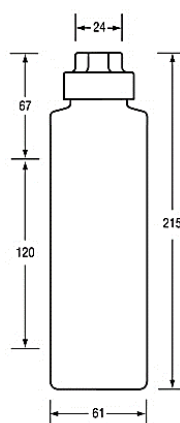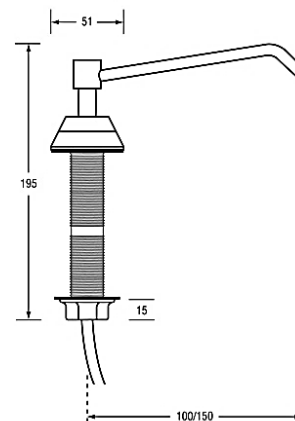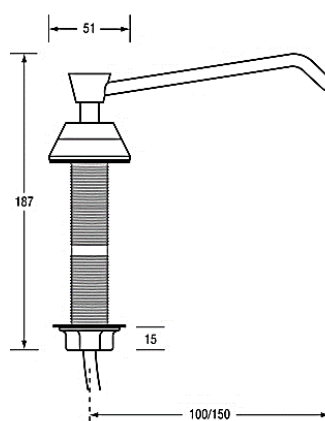


The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

5. To fill the soap container, use the key provided to unlock the cover of the spout by placing the key in the slots and turning it to undo the cover.



 6. Remove the spout and tube for top loading refill.

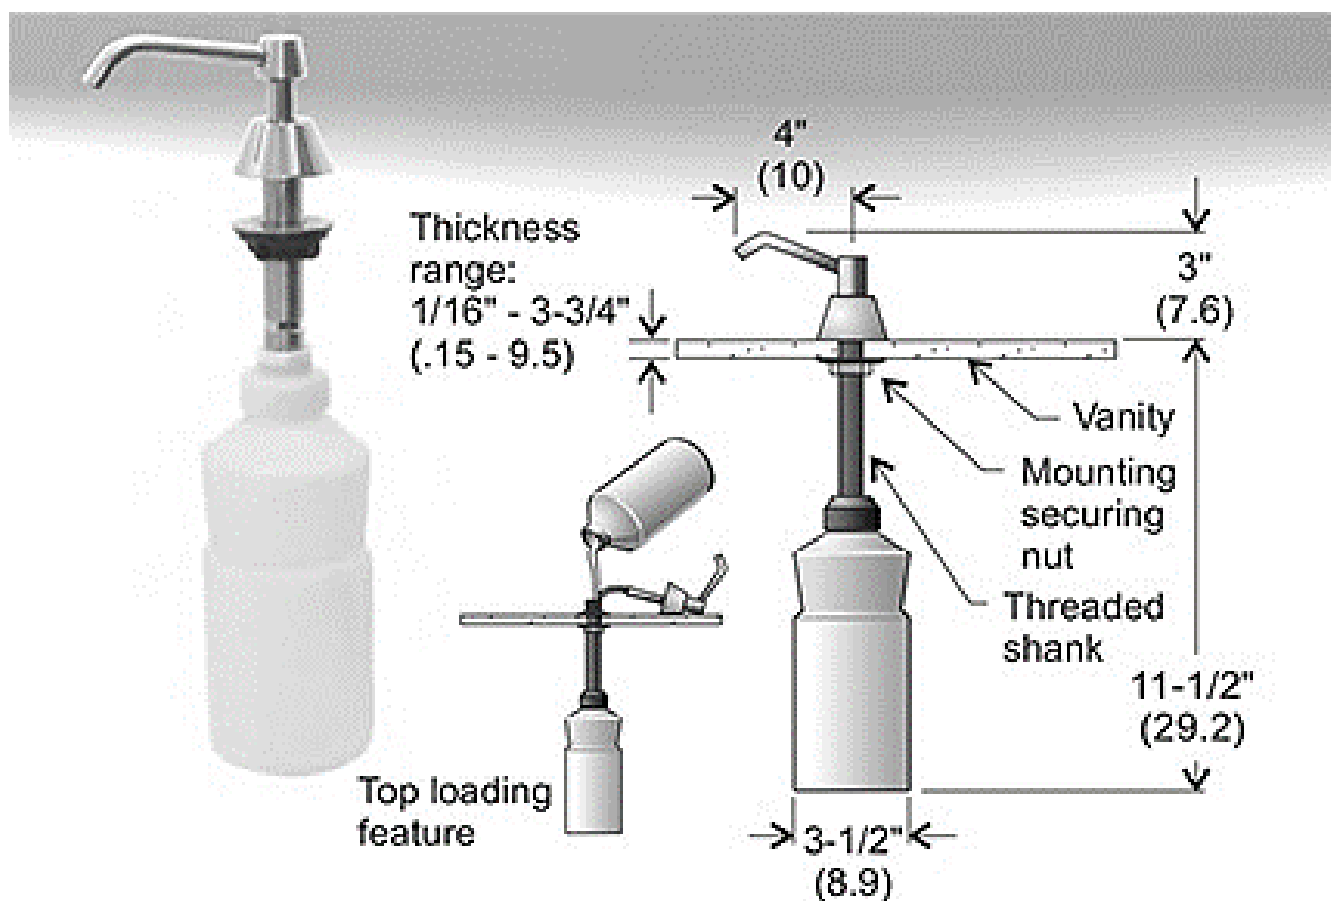

This product is AS1428.1 compliant (accessible compliant) when installed in accordance with the guidelines.

The technical recommendations contained in this document are necessarily of a general nature and should not be relied on for specific applications without first securing competent advice. Whilst Metlam Australia Pty Ltd has taken all reasonable steps to ensure the information contained herein is accurate and current, it does not warrant the accuracy or completeness of the information and does not accept liability for errors or omissions. Any Commercial product should only be installed by a competent tradesperson and serviced/maintained by knowledgeable janitorial staff or competent people. Metlam Australia accepts no responsibility for any damage to product, walls or fixtures due to incorrect installation or maintenance of any of their products.

The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.