

MLR_P Premium Grab Rails


Note

This product is to be installed by suitably qualified persons, in a fit-for-purpose application, to suitable materials, using suitable fixings, and complying with any relevant codes.

Hardware Provided

Please be aware that fixings are not included.

It is the responsibility of the installer to ensure that the surface/substrate that the unit is installed upon and the fixings used are suitable to withstand the weight-bearing loads of the unit and if required as per AS1428 / Australia building code regulations.

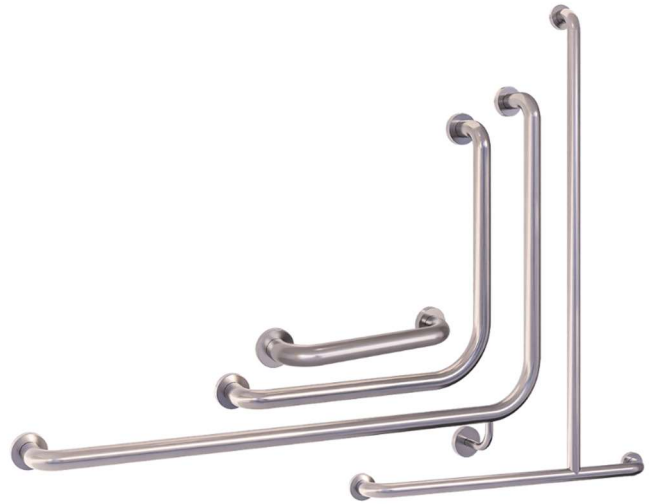

Before Installation

- Inspect the product. If there is any damage or missing parts, do not install the product and contact your place of purchase.
- Ensure the surface you wish to mount the rail to is either solid or has adequate in-wall support.
- Ensure the surface you wish to mount the rail to is flat.

Installation Instructions

Placement may be subject to regulations/codes and architectural drawings. Correct positioning is the responsibility of the installer.

- Unscrew the cover plates from the mounting flanges by twisting them anti-clockwise.
- Position the grab rail in the desired position and mark using the mounting holes as a template, ensuring the rail is level.
If required, the mounting flanges can be rotated by loosening and then tightening the hex screw on the reverse side of the mounting flange.
- Secure the first mounting flange to the wall using appropriate fixings (not supplied).
Where the grab rail has both a horizontal and vertical part, start with the horizontal part.
- Secure the other mounting flanges, ensuring the rail is level.
- Screw the cover plates to the mounting flanges by twisting them clockwise.

Technical recommendations and installation advice from Metlam Australia Pty Ltd are general in nature and provided in good faith without warranty. Metlam disclaims all liability for errors, omissions, or damage resulting from improper installation or maintenance. All products must be installed by qualified tradespeople and maintained by competent personnel. It is the installer's responsibility to conduct thorough pre-installation assessments; Metlam Australia will not enter into post-installation disputes regarding positioning, functionality, or external factors affecting performance.

The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.