Installation Guidelines Sheet



ANMB_700TRH Antimicrobial Single Toilet Roll Holder

Material Specifications

- #304 Stainless Steel
- 15mmø Solid Horizontal Bar
- Antimicrobial Coated

Dimensions

175mmW x 47mmH x 77mmD

Mounting

- Surface Mount Security Concealed Fix
- Left Hand installation only


Installation Guidelines

- May be subject to Australian Building Code Regulations for able bodied and/or disabled use.
- Remove fixing plate from holder. Locate fixing
 position on wall or partition and mark using the top
 and bottom mounting holes of the fixing plate.
- 2. Drill holes and loosely secure fixing plate to wall or partition surface using the screws and wall plugs provided (do not put the screw into the middle hole, this can cause the fixing plate to become loose).
- 3. Check the fixing plate is level and tighten screws.
- Secure the toilet roll holder body onto the fixing plate bracket using the grub screw with the supplied Allen key.
- Ensure the grub screw is fully tightened to finish installation.

Capacity

Holds one standard toilet roll.



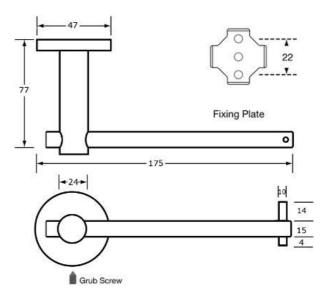



This product is AS1428.1 compliant (accessible compliant) when installed in accordance with the guidelines.

The technical recommendations contained in this document are necessarily of a general nature and should not be relied on for specific applications without first securing competent advice. Whilst Metlam Australia Pty Ltd has taken all reasonable steps to ensure the information contained herein is accurate and current, it does not warrant the accuracy or completeness of the information and does not accept liability for errors or omissions. Any Commercial product should only be installed by a competent tradesperson and serviced/maintained by knowledgeable janitorial staff or competent people. Metlam Australia accepts no responsibility for any damage to product, walls or fixtures due to incorrect installation or maintenance of any of their products.

The photographs and line drawings of the products presented above are representational only.

Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions

Metlam Australia Pty Ltd T: 1300 METLAM E: sales@metlam.com.au www.metlam.com.au